

制作说明：A4对折


封面纸质：铜板纸

# USER MANUAL

## Hybrid

## Solar Inverter

## DATOU BOSS

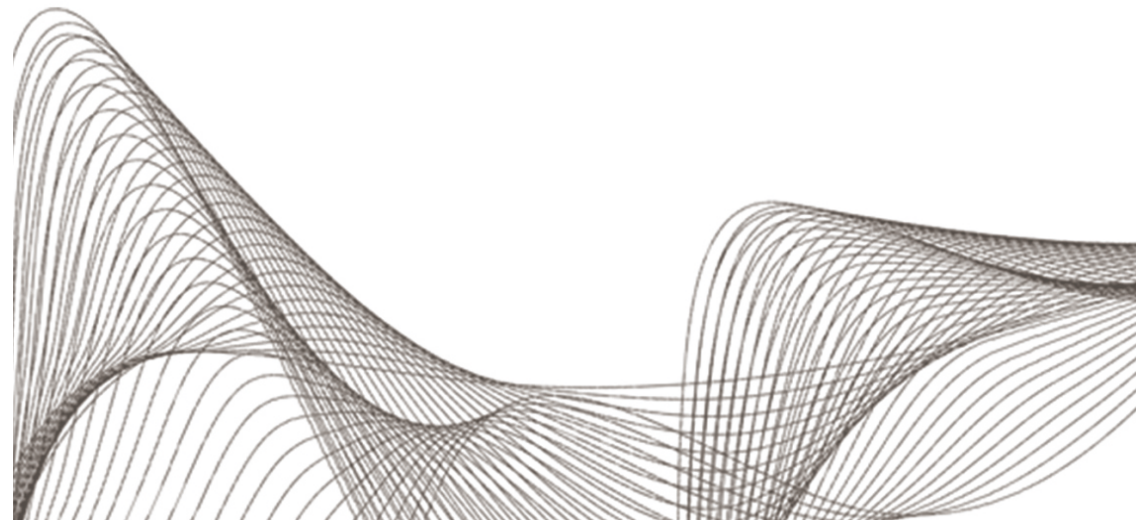

| Model                                |                                           |                       | DT1220S                                                                  | DT2436S           | DT4862S  | DT4811S        |
|--------------------------------------|-------------------------------------------|-----------------------|--------------------------------------------------------------------------|-------------------|----------|----------------|
| Input                                | Input Sources                             |                       | L+N+PE                                                                   |                   |          |                |
|                                      | Rated Input Voltage                       |                       | 220/230/240VAC                                                           |                   |          |                |
|                                      | Voltage Range                             |                       | 90-280VAC±3V(APL Mode)170-280VAC±3V(UPS Mode)                            |                   |          |                |
|                                      | Frequency                                 |                       | 50Hz/60Hz(Auto Adaptive)                                                 |                   |          |                |
| Output                               | Rated power                               | The battery inverts   | 1600W                                                                    | 3600W             | 6200W    | 11000W         |
|                                      |                                           | Photovoltaic inverter | 2000W                                                                    | 3600W             | 6200W    | 12000W         |
|                                      | Output Voltage                            |                       | 220/230/240VAC±5%                                                        |                   |          |                |
|                                      | Output Frequency                          |                       | 50/60Hz±0.1%                                                             |                   |          |                |
|                                      | Waveform                                  |                       | Pure Sine Wave                                                           |                   |          |                |
|                                      | Transfer Time (adjustable)                |                       | Computers(UPS Mode)10ms, Appliance(APL Mode )20ms                        |                   |          |                |
|                                      | Peak Power                                |                       | 3200VA                                                                   | 7200VA            | 12400VA  | 22000VA        |
|                                      | Overload capacity                         |                       | Battery mode:11s@105%~150% Load;2s@150%~200% Load; 400ms@>200% Load      |                   |          |                |
|                                      | Grid-connected operation                  | Output Voltage        |                                                                          | 220/230/240VAC±5% |          |                |
| Feed into the grid voltage range     |                                           | 100-280VAC            |                                                                          |                   |          |                |
| Feed into the grid frequency range   |                                           | 47~53±1Hz/57~62±1Hz   |                                                                          |                   |          |                |
| Nominal output current               |                                           | 8.7A                  | 15.7A                                                                    | 26.9A             | 47.8A    |                |
| Power Factor Range                   |                                           | >0.99                 |                                                                          |                   |          |                |
| Maximum conversion efficiency(DC/AC) |                                           | 98%                   |                                                                          |                   |          |                |
| Battery                              | Battery Voltage                           |                       | 12Vdc                                                                    | 24Vdc             | 48Vdc    | 48Vdc          |
|                                      | Constant Charging Voltage (Adjustable)    |                       | 14.1Vdc                                                                  | 28.2Vdc           | 56.4Vdc  | 56.4Vdc        |
|                                      | Floate Charging Voltage (Adjustable)      |                       | 13.5Vdc                                                                  | 27Vdc             | 54Vdc    | 54Vdc          |
| Chargers                             | PV Charging Mode                          |                       | MPPT                                                                     | MPPT              | MPPT     | MPPT Dual MPPT |
|                                      | MAX.PV Input Power                        |                       | 3000W                                                                    | 5000W             | 8500W    | 2*7500W        |
|                                      | MPPT Tracking Range                       |                       | 60~500Vdc                                                                |                   |          |                |
|                                      | Best voltage                              |                       | 300-400V                                                                 | 300-400V          | 360-430V | 360-430V       |
|                                      | MAX.PV Input Voltage                      |                       | 500Vdc                                                                   | 500Vdc            | 500Vdc   | 500Vdc         |
|                                      | PV Max Input Current                      |                       | 15A                                                                      | 15A               | 27A      | 27A/27A        |
|                                      | MAX.PV Charging Current                   |                       | 100A                                                                     | 120A              | 120A     | 150A           |
|                                      | MAX.AC Charging Current                   |                       | 80A                                                                      | 100A              | 100A     | 150A           |
|                                      | MAX.Charging Current                      |                       | 100A                                                                     | 120A              | 120A     | 150A           |
| Display                              | LCD interface                             |                       | CAN display running mode/load/input/output,etc.                          |                   |          |                |
| Interface                            | RS232                                     |                       | Baud Rate2400                                                            |                   |          |                |
|                                      | Extend the socket communication interface |                       | Lithium Battery BMS Communication Card WifiCard                          |                   |          |                |
| Environments                         | Operating Temperature                     |                       | -10~50℃                                                                  |                   |          |                |
|                                      | Humidity                                  |                       | 20%~95%(Non-condensing)                                                  |                   |          |                |
|                                      | Storage Temperature                       |                       | -15~60℃                                                                  |                   |          |                |
|                                      | Altitude                                  |                       | Altitude Not Over 1000m,Derating over 1000m,Max 4000m, Refer to IEC62040 |                   |          |                |
|                                      | Noise                                     |                       | ≤50db                                                                    |                   |          |                |
| Standards and certification          |                                           |                       | EN-IEC 60335-1,EN IEC 60335-2-29, IEC 62109-1                            |                   |          |                |

# Table Of Contents

|                                           |           |
|-------------------------------------------|-----------|
| <b>1 About This Manual.....</b>           | <b>1</b>  |
| 1.1 Purpose.....                          | 1         |
| 1.2 Scope.....                            | 1         |
| <b>2 Safety Instructions.....</b>         | <b>1</b>  |
| <b>3 Introduction.....</b>                | <b>2</b>  |
| 3.1 Features.....                         | 2         |
| 3.2 Basic System Architecture.....        | 2         |
| 3.3 Product Overview.....                 | 3         |
| <b>4 Installation.....</b>                | <b>5</b>  |
| 4.1 Unpacking And Inspection .....        | 5         |
| 4.2 Preparation .....                     | 5         |
| 4.3 Mounting The Unit.....                | 5         |
| 4.4 Battery Connection.....               | 6         |
| 4.5 Ac Input/Output Connection.....       | 7         |
| 4.6 PV Connection.....                    | 8         |
| 4.7 Final Assembly.....                   | 10        |
| <b>5 Operation.....</b>                   | <b>10</b> |
| 5.1 Power On/off.....                     | 10        |
| 5.2 Operation and Display Pane .....      | 11        |
| 5.3 LCD Setting.....                      | 17        |
| 5.4 Battery Equalization Description..... | 25        |
| 5.5 Fault and alarm description.....      | 27        |
| <b>6 Trouble removal.....</b>             | <b>29</b> |
| <b>7 Technical datasheet.....</b>         | <b>30</b> |

## 6.Trouble removal

| Problem                                                                       | LCD/LED/Buzzer                                                          | Explanation/Possible cause                                                                                                                                                       | What to do                                                                                                                                                            |
|-------------------------------------------------------------------------------|-------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unit shuts down automatically during startup process.                         | LCD/LEDs and buzzer will be active for 3 seconds and then complete off. | The battery voltage is too low (<1.91V/Cell)                                                                                                                                     | 1. Re-charge battery.<br>2. Replace battery.                                                                                                                          |
| No response after power on.                                                   | No indication.                                                          | 1. The battery voltage is far too low.(<1.4V/Cell)<br>2. Internal fuse tripped.                                                                                                  | 1.Contact repair center for replacing the fuse.<br>2. Re-charge battery.<br>3. Replace battery.<br>Check if AC breaker is tripped and AC wiring is connected well.    |
| Mains exist but the unit works in battery mode.                               | Input voltage is displayed as 0 on the LCD and green LED is flashing.   | Input protector is tripped                                                                                                                                                       |                                                                                                                                                                       |
|                                                                               | Green LED is flashing                                                   | Insufficient quality of AC power. (Shore or Generator)                                                                                                                           | 1. Check if AC wires are too thin and/or too long.<br>2. Check if generator (if applied)is working well or if input voltage range setting is correct.(UP-->sppliance) |
|                                                                               | Green LED is flashing.                                                  | Set "Solar First" as the priority of output source.                                                                                                                              | Change output source priority to Utility first.                                                                                                                       |
| When the unit is turned on, internal relay is switched on and off repeatedly. | LCD display and LEDs are flashing                                       | Battery is disconnected.                                                                                                                                                         | Check if battery wires are connected well.                                                                                                                            |
| Buzzer beeps continuously and red LED is on.                                  | Fault code 07                                                           | Overload error. The inverter is overload 105% and time is up.                                                                                                                    | Reduce the connected load by switching off some equipment.                                                                                                            |
|                                                                               |                                                                         | If PV input voltage is higher than specification, the output power will be derated.At this time, if connected loads is higher than derated output power, it will cause overload. | Reduce the number of PV modules in series or the connected load.                                                                                                      |
|                                                                               | Fault code 05                                                           | Output short circuited.                                                                                                                                                          | Check if wiring is connected well and remove abnormal load.                                                                                                           |
|                                                                               |                                                                         | Temperature internal converter component is over 120°C.                                                                                                                          | Check whether the air flow of the unit is blocked or whether the ambient temperature is too high.                                                                     |
|                                                                               | Fault code 02                                                           | Internal temperature of inverter component is over 100°C                                                                                                                         |                                                                                                                                                                       |
|                                                                               | Fault code 03                                                           | Battery is over-charged                                                                                                                                                          | Return to repair center.                                                                                                                                              |
|                                                                               |                                                                         | The battery voltage is too high.                                                                                                                                                 | Check if spec and quantity of batteries are meet requirements.                                                                                                        |
|                                                                               | Fault code 01                                                           | Fan fault                                                                                                                                                                        | Replace the fan.                                                                                                                                                      |
|                                                                               | Fault code 06/58                                                        | Output abnormal (Inverter voltage below than 190Vac or is higher than 260Vac)                                                                                                    | 1. Reduce the connected load.<br>2. Return to repair center                                                                                                           |
|                                                                               | Fault code 08/09/53/57                                                  | Internal components failed.                                                                                                                                                      | Return to repair center.                                                                                                                                              |
|                                                                               | Fault code 51                                                           | Over current or surge.                                                                                                                                                           | Restart the unit, if the error happens again, please return to repair center.                                                                                         |
|                                                                               | Fault code 52                                                           | Bus voltage is too low.                                                                                                                                                          |                                                                                                                                                                       |
|                                                                               | Fault code 55                                                           | Output voltage is unbalanced.                                                                                                                                                    |                                                                                                                                                                       |
|                                                                               | Fault code 59                                                           | PV input voltage is beyond the specification.                                                                                                                                    | Reduce the number of PV modules in series.                                                                                                                            |

### 5.5.2 Alarm Descriptions

➤ **Alarm:** The red LED flashes, and the LCD displays an alarm code, the inverter does not enter the failure mode

#### Alarm Indicator

| Alarm Code | Alarm Event                                   | Audible Alarm                 | Icon flashing                                                                             |
|------------|-----------------------------------------------|-------------------------------|-------------------------------------------------------------------------------------------|
| A01        | Fan is locked when inverter is on.            | Beep three times every second | A01<br>⚠                                                                                  |
| A02        | Over temperature                              | None                          | A02<br>⚠                                                                                  |
| A03        | Battery is over-charged                       | Beep once every second        | A03<br>⚠                                                                                  |
| A04        | Low battery                                   | Beep once every second        | A04<br>⚠                                                                                  |
| A07        | Overload                                      | Beep once every 0.5 second    | A07<br>⚠                                                                                  |
| A10        | Output power derating                         | Beep twice every 3 seconds    | A10<br>⚠                                                                                  |
| A15        | PV energy is low.                             | Beep twice every 3 seconds    | A15<br>⚠                                                                                  |
| A16        | High AC input (>280VAC) during BUS soft start | None                          | A16<br>⚠                                                                                  |
| A27        | Max battery discharge current setting         | None                          | A27<br>⚠                                                                                  |
| E9         | Battery equalization                          | None                          | E9<br>⚠                                                                                   |
| bP         | Battery is not connected                      | None                          |  bP<br>⚠ |

### 5.5.3 Code Reference

Related information code will be displayed on LCD screen. Please check inverter LCD screen for the operation.

| Code | Description                                                                                                                                                                                                                                                                                   |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 60 ⚠ | If battery status is not allowed to charge and discharge after the communication between the inverter and battery is successful, it will show code 60 to stop charging and discharging battery.                                                                                               |
| 61 ⚠ | Communication lost <ul style="list-style-type: none"> <li>After battery is connected, communication signal is not detected for 1 minutes, buzzer will beep.</li> <li>Communication lost occurs after the inverter and battery is connected successfully, buzzer beeps immediately.</li> </ul> |
| 69 ⚠ | If battery status is not allowed to charge after the communication between the inverter and battery is successful, it will show code 69 to stop charging battery.                                                                                                                             |
| 70 ⚠ | If battery status must to charge after the communication between the inverter and battery is successful, it will show code 70 to charge battery.                                                                                                                                              |
| 71 ⚠ | If battery status is not allowed to discharge after the communication between the inverter and battery is successful, it will show code 71 to stop discharge battery.                                                                                                                         |

## 1 About This Manual

### 1.1 Purpose

This manual describes the assembly, installation, operation and troubleshooting of this unit. Please read this manual carefully before installations and operations, Keep manual for future reference.

### 1.2 Scope

This manual provides safety and installation guidelines as well as information on tools and wiring.

## 2 Safety Instructions



**WARNING:** This chapter contains important safety and operating instructions. Read and keep this manual for future reference.

- Before using the unit read all instructions and cautionary markings on the unit, the batteries and all appropriate sections of this manual.
- CAUTION-**To reduce risk of injury, charge only deep-cycle lead acid type rechargeable batteries. Other types of batteries may burst, causing personal injury and damage.
- Do not disassemble the unit Take it to a qualified service center when service or repair is required. Incorrect re-assembly may result in a risk of electric shock or fire.
- To reduce risk of electric shock, disconnect all wirings before attempting any maintenance or cleaning. Turning off the unit will not reduce this risk.
- CAUTION-**Only qualified personnel can install this device with battery.
- NEVER** charge a frozen battery.
- For optimum operation of this inverter/charger, please follow required spec to select appropriate cable size. It's very important to correctly operate this inverter/charger.
- Be very cautious when working with metal tools on or around batteries. A potential risk exists to drop a tool to spark or short circuit batteries or other electrical parts and could cause an explosion.
- Please strictly follow installation procedure when you want to disconnect AC or DC terminals, Please refer to INSTALLATION section of this manual for the details
- One piece of 150A fuse is provided as over-current protection for the battery supply.
- GROUNDING INSTRUCTIONS** -This inverter/ charger should be connected to a permanent grounder wiring system. Be sure to comply with local requirements and regulation to install this inverter.
- NEVER** cause AC output and DC input short circuited. Do NOT connect to the mains when DC input short circuits.
- Warning!!** Only qualified service persons are able to service this device. If errors still persist after following troubleshooting table, please send this inverter/charger back to local dealer or service center for maintenance.

### 3 Introduction

This is a multi-function Inverter/charger, combining functions of inverter, solar charger and battery charger to offer uninterruptible power support with portable size. Its comprehensive LCD display offers user-configurable and easy-accessible button operation such as battery charging current, AC/solar charger priority, and acceptable input voltage based on different applications.

#### 3.1 Features

- ♦ Pure sine wave inverter
- ♦ Configurable input voltage range for home appliances and personal computers via LCD setting
- ♦ Configurable battery charging current based on applications via LCD setting
- ♦ Configurable AC/Solar Charger priority via LCD setting
- ♦ Compatible to mains voltage or generator power
- ♦ Auto restart while AC is recovering
- ♦ Overload/Over temperature/short circuit protection
- ♦ Smart battery charger design for optimized battery performance
- ♦ Cold start function


#### 3.2 Basic System Architecture

The following illustration shows basic application for this inverter/charger. It also includes following devices to have a complete running system:

- ♦ Generator or Utility
- ♦ PV modules

Consult with your system integrator for other possible system architectures depending on your requirements.

This inverter can power all kinds of appliances in home or environment, including motor-type appliances such as tube light, fan, refrigerator and air conditioner.

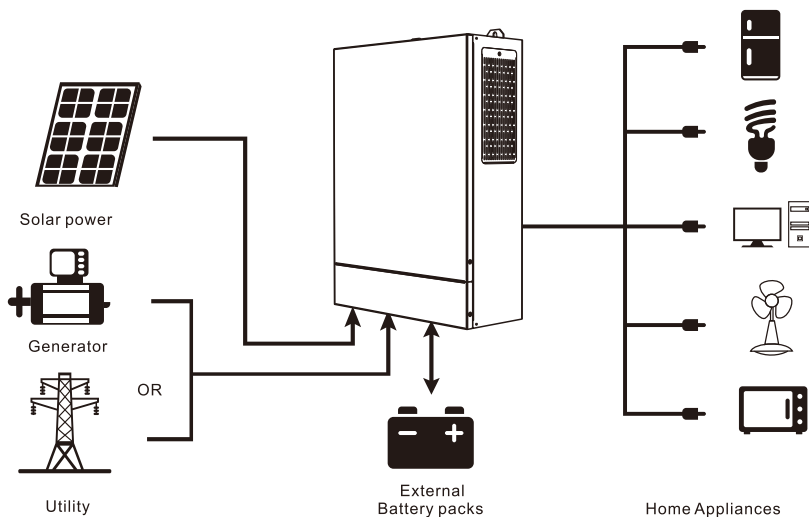

### 5.5 Fault and alarm description

#### 5.5.1 Faults Descriptions

➤ **Fault:** The inverter enters the fault mode, the red LED light is always on and the LCD displays the fault code.

#### Fault Reference Code

| Fault Code | Fault Event                                                                              | Icon on                     |
|------------|------------------------------------------------------------------------------------------|-----------------------------|
| F01        | Fan is locked when inverter is off.                                                      | F01<br><small>ERROR</small> |
| F02        | Over temperature or NTC is not connected well.                                           | F02<br><small>ERROR</small> |
| F03        | Battery voltage is too high.                                                             | F03<br><small>ERROR</small> |
| F04        | Battery voltage is too low.                                                              | F04<br><small>ERROR</small> |
| F05        | Output short circuited or over temperature is detected by internal converter components. | F05<br><small>ERROR</small> |
| F06        | Output voltage is too high.                                                              | F06<br><small>ERROR</small> |
| F07        | Over load time out.                                                                      | F07<br><small>ERROR</small> |
| F08        | Bus voltage is too high                                                                  | F08<br><small>ERROR</small> |
| F09        | Bus soft start failed                                                                    | F09<br><small>ERROR</small> |
| F51        | Over currents or urge                                                                    | F51<br><small>ERROR</small> |
| F52        | Bus voltage is too low                                                                   | F52<br><small>ERROR</small> |
| F53        | Inverter soft start failed                                                               | F53<br><small>ERROR</small> |
| F55        | Over DC voltage in AC output                                                             | F55<br><small>ERROR</small> |
| F57        | Current sensor failed                                                                    | F57<br><small>ERROR</small> |
| F58        | Output voltage is too low                                                                | F58<br><small>ERROR</small> |
| F59        | PV voltage is over limitation                                                            | F59<br><small>ERROR</small> |


### ※ How to Apply Equalization Function

You must enable battery equalization function in monitoring LCD setting program 30 first. Then, you may apply this function in device by either one of following methods:

- 1.Setting equalization interval in program 35.
- 2.Active equalization immediately in program 36.


### ※ When to Equalize

In stage, when the setting equalization interval( battery equalization cycle) is arrived, or equalization is active immediately, the controller will start to enter Equalize stage.

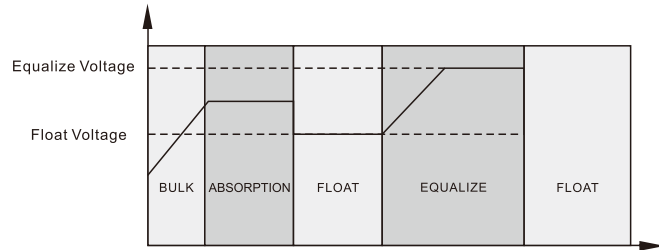


### ※ Equalize charging time and timeout

In Equalize stage, the controller will supply power to charge battery as much as possible until battery voltage raises to battery equalization voltage. Then, constant-voltage regulation is applied to maintain battery voltage at the battery equalization voltage. The battery will remain in the Equalize stage until setting battery equalized time is arrived.

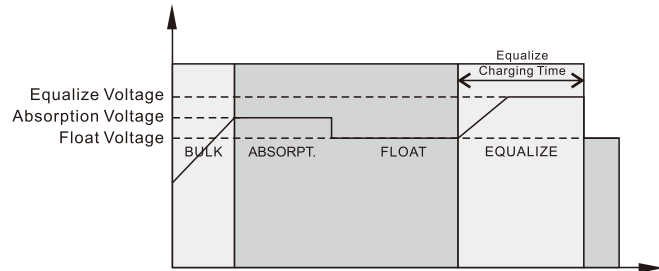


However, in Equalize stage, when battery equalized time is expired and battery voltage doesn't rise to battery equalization voltage point, the charge controller will extend the battery equalized time until battery voltage achieves battery equalization voltage. If battery voltage is still lower than battery equalization voltage when battery equalized timeout setting is over, the charge controller will stop equalization and return to float stage.

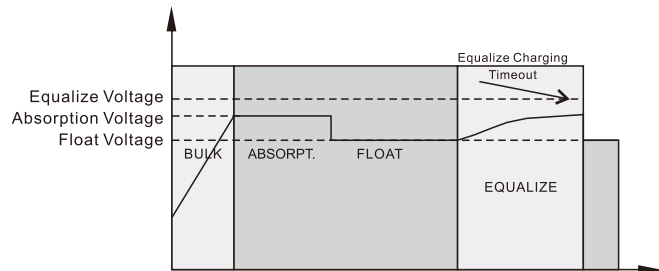



## 3.3 Product Overview

### 3.3.1 LCD Screen

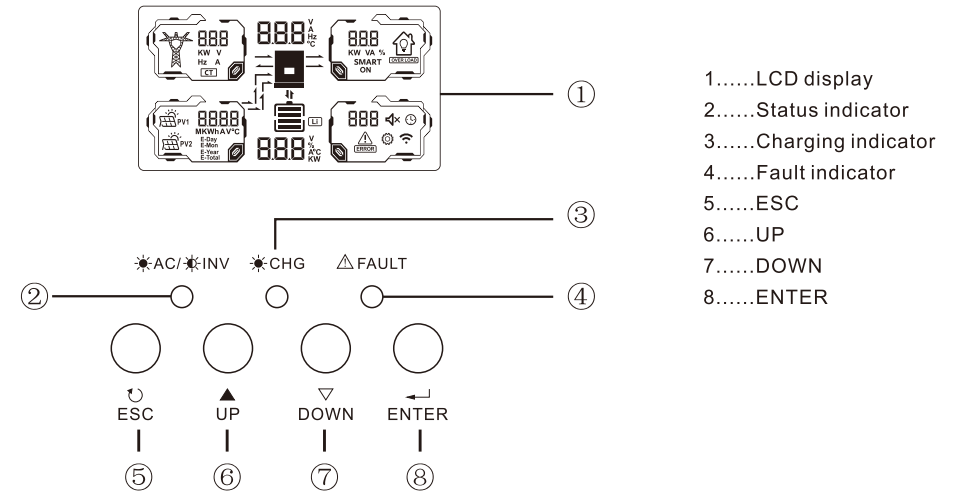

### 3.3.2 Back Panel

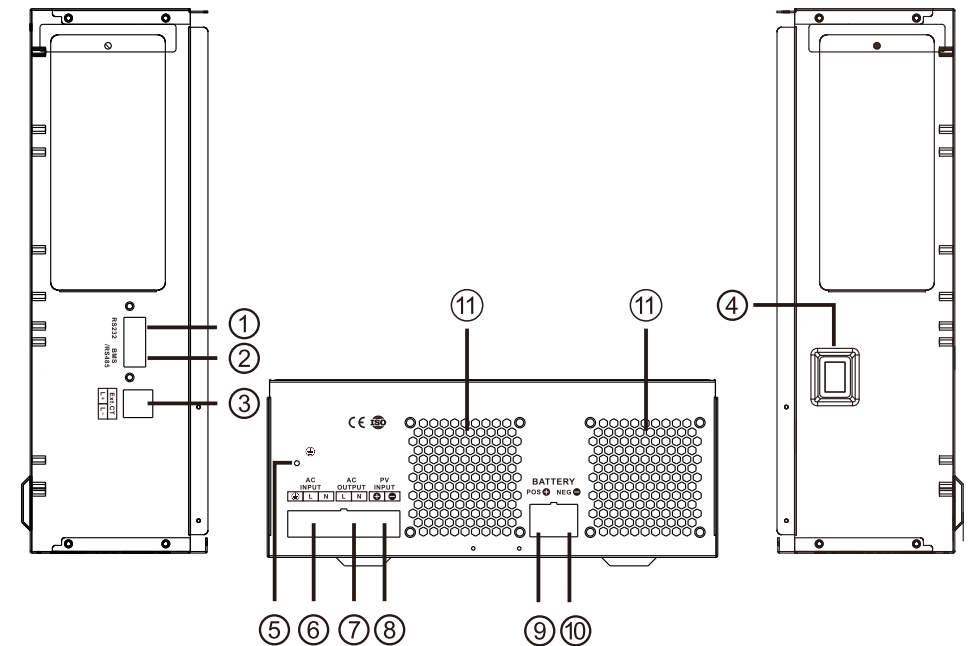


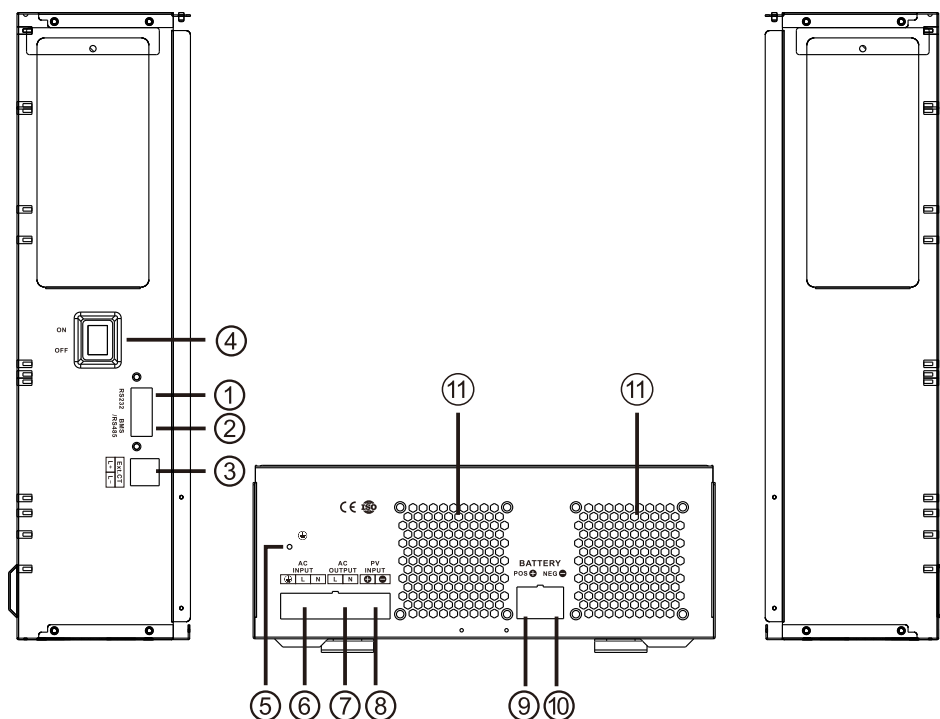

- |                                    |                                 |
|------------------------------------|---------------------------------|
| 1.....RS232 Communication Port     | 7.....AC output                 |
| 2.....BMS/RS485 Communication Port | 8.....PV Input                  |
| 3.....CT Signal port               | 9.....Battery Terminal Positive |
| 4.....Power ON/OFF Switch          | 10...Battery Terminal Negative  |
| 5.....Output ground wire           | 11...Fan                        |
| 6.....AC Input                     |                                 |

|    |                                                |                                                    |                                                                                                                             |
|----|------------------------------------------------|----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|
| 58 | Set the input power of the mains power         | 0.15KW(default)<br><b>2EP 0.15<sub>KW</sub> 58</b> | Setting range is from 0.01KW to 0.5KW.Increment of each click is 0.01KW.                                                    |
| 59 | Max battery discharge current setting          | 200(default)<br><b>d IC 200 59</b>                 | When the battery discharge current more than the setting value, the unit will be alarm.The setting range is from 20 to 200. |
| 67 | Output Open Time                               | <b>d tA 000 67</b>                                 | The value ranges from 0 to 23.                                                                                              |
| 68 | Output Stop Time                               | <b>d tO 000 68</b>                                 | The value ranges from 0 to 23.                                                                                              |
| 71 | Start time setting for power grid peak shaving | 00:00(Default)<br><b>L SA 000 71</b>               | In PEC mode, set the start time and stop time for the battery to sell electricity according to requirements.                |
| 72 | Stop time setting for power grid peak shaving  | 00:00(Default)<br><b>L SO 000 72</b>               |                                                                                                                             |

When the BMS/485 communication interface is externally connected, as shown in the following figure:

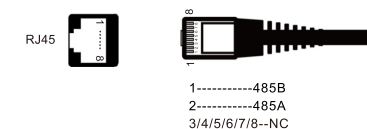

## Communication Connection

Please use supplied communication cable to connect to inverter and PC. Please install a monitoring software on the computer.

## 5.4 Battery Equalization Description

Equalization function is added into charge controller, It reverses the buildup of negative chemical effects like stratification, a condition where acid concentration is greater at the bottom of the battery than at the top. Equalization also helps to remove sulfate crystals that might have built up on the plates. If left unchecked, this condition, called sulfation, will reduce the overall capacity of the battery. Therefore, it's recommended to equalize battery periodically.

|    |                                    |                                                                                                                                                                     |                                                                                                                                       |
|----|------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| 48 | Scheduled time for AC output on    | 00:00(Default)<br><b>ON 000<sup>h</sup> 48</b><br>The setting range of scheduled Time for AC output on is from 00:00 to 23:00, increment of each click is 1 hour.   |                                                                                                                                       |
| 49 | Scheduled time for AC output off   | 00:00(Default)<br><b>OFF 000<sup>h</sup> 49</b><br>The setting range of scheduled Time for AC output off is from 00:00 to 23:00, increment of each click is 1 hour. |                                                                                                                                       |
| 50 | Set country customized regulations | Mode 1                                                                                                                                                              | If selected, acceptable feed-in grid voltage range will be 195.5-253VAC. Acceptable feed-in grid frequency range will be 49-51Hz.     |
|    |                                    | Mode 2                                                                                                                                                              | If selected, acceptable feed-in grid voltage range will be 184-264.5VAC. Acceptable feed-in grid frequency range will be 47.5-51.5Hz. |
|    |                                    | Mode 3                                                                                                                                                              | If selected, acceptable feed-in grid voltage range will be 184-264.5VAC. Acceptable feed-in grid frequency range will be 57-62Hz.     |
|    |                                    | Mode 4                                                                                                                                                              | If selected, acceptable feed-in grid voltage range will be 170-264.5VAC. Acceptable feed-in grid frequency range will be 47.5-53.5Hz. |
|    |                                    | Mode 5(Default)                                                                                                                                                     | If selected, acceptable feed-in grid voltage range will be 100-280VAC. Acceptable feed-in grid frequency range will be 47.5-53.5Hz.   |
| 51 | Time setting-Minute                | For minute setting, the range is from 00 to 59.<br><b>min 00 51</b>                                                                                                 |                                                                                                                                       |
| 52 | Time setting-Hour                  | For hour setting, the range is from 00 to 23.<br><b>HOU 00 52</b>                                                                                                   |                                                                                                                                       |
| 53 | Time setting-Day                   | For day setting, the range is from 00 to 31.<br><b>dat 01 53</b>                                                                                                    |                                                                                                                                       |
| 54 | Time setting-Month                 | For month setting, the range is from 1 to 12<br><b>mon 01 54</b>                                                                                                    |                                                                                                                                       |
| 55 | Time setting-Year                  | For year setting, the range is from 16 to 99.<br><b>YEA 16 55</b>                                                                                                   |                                                                                                                                       |
| 56 | GRID-tie power                     | 6.2KW<br><b>6.2<sub>KW</sub> 56</b>                                                                                                                                 | Increment of each click is 200W.                                                                                                      |

## 4 INSTALLATION


### 4.1 Unpacking and Inspection

Before installation, please inspect the unit. Be sure that nothing inside the package is damaged. You should have received the following items inside of package:

- ◆ The unit x 1
- ◆ User manual 1

### 4.2 Preparation


Before connecting all please take off bottom cover by removing two screws as shown below.

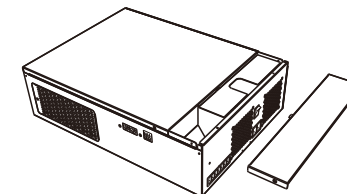

### 4.3 Mounting the Unit

Consider the following points before selecting where to install:


- ※ Do not mount the inverter on flammable construction materials.
- ※ Mount on a solid surface
- ※ Install this inverter at eye level in order to allow the LCD display to be read at all times.
- ※ For proper air circulation to dissipate heat, allow a clearance of approx. 20 cm to the side and approx. 50 cm above and below the unit.
- ※ The ambient temperature should be within the range of 20~35°C to ensure optimal operation
- ※ The recommended installation position is to be adhered to the wall vertically.
- ※ Be sure to keep other objects and surfaces as shown in the diagram to guarantee sufficient heat dissipation and to have enough space for removing wires.

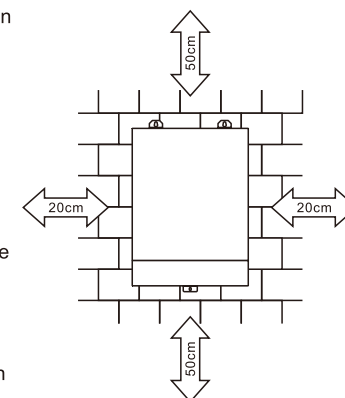

**SUITABLE FOR MOUNTING ON CONCRETE OR OTHER NON-COMBUSTIBLE SURFACE ONLY.**

Install the unit by screwing three screws.


- 1,2,3 Use the M6\*80mm expansion bolts.

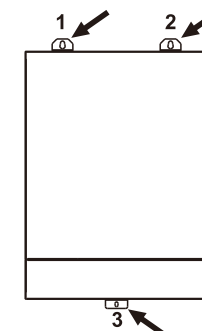

#### 4.4 Battery Connection

**CAUTION:** For safety operation and regulation compliance, it's requested to install a separate DC over-current protector or disconnect device between battery and inverter. It may not be requested to have a disconnect device in some applications, however, it's still requested to over-current protection installed. Please refer to typical amperage in below table as required fuse or breaker size.

##### Ring terminal:





**WARNING!** All wiring must be performed by be qualified personnel.  
**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for battery connection. To reduce risk of injury, please use the proper recommended cable and terminal size as below.

Recommended battery cable and terminal size:

| Rated Capacity | Typical Amperage | Battery capacity | Wire Size | Ring Terminal |            |       | Torque value |
|----------------|------------------|------------------|-----------|---------------|------------|-------|--------------|
|                |                  |                  |           | Cable(mm²)    | Dimensions |       |              |
|                |                  |                  |           |               | D(mm)      | L(mm) |              |
| 2KVA           | 165A             | 200AH            | 2*4AWG    | 25            | 8.4        | 33.2  | 5Nm          |
| 3.6KVA         | 138A             | 200AH            | 2*4AWG    | 25            | 8.4        | 33.2  | 5Nm          |
| 6.2KVA         | 128A             | 200AH            | 1*2AWG    | 38            | 8.4        | 39.2  | 5Nm          |
|                |                  |                  | 2*4AWG    | 25            | 8.4        | 33.2  |              |
| 11KVA          | 228A             | 250AH            | 1*3/0AWG  | 85            | 8.4        | 54    | 5Nm          |

please follow below steps to implement battery connection:


1.Assemble battery ring terminal based on recommended battery cable and terminal size.

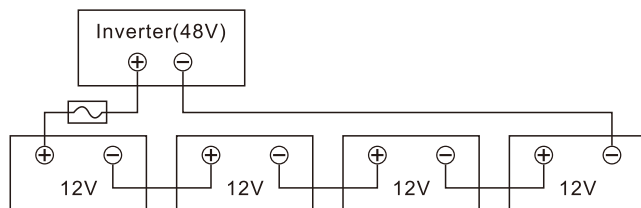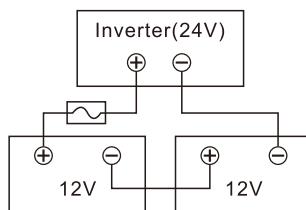

|    |                                    | Enable                                                                                                                                                                                                                                                                                                                                                                                                             | Disable (default)                                                                                                                                                                                                                                |
|----|------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    |                                    | AE9 36                                                                                                                                                                                                                                                                                                                                                                                                             | Ad5 36                                                                                                                                                                                                                                           |
| 36 | Equalization activated immediately | If equalization function is enabled in program 30, this program can be set up. If "Enable" is selected in this program, it's to activate battery equalization immediately and LCD main page will shows " E9 ", If "Disable" is selected, it will cancel equalization function until next activated equalization time arrives based on program 35 setting. At this time, " E9 " will not be shown in LCD main page. |                                                                                                                                                                                                                                                  |
| 37 | BMS Function Switch                | off(default)<br>b75 OFF 37                                                                                                                                                                                                                                                                                                                                                                                         | Whether to enable the BMS communication function                                                                                                                                                                                                 |
|    |                                    | b75 ON 37                                                                                                                                                                                                                                                                                                                                                                                                          |                                                                                                                                                                                                                                                  |
| 38 | Bat Soc Under Lock                 | b5U 10% 38                                                                                                                                                                                                                                                                                                                                                                                                         | If any type of lithium battery is selected in program 5. BMS low voltage SOC value, if the BMS SOC value is lower than the set value, the inverter will shut down to protect the battery.                                                        |
| 39 | Bat Soc Turn To Ac                 | 5tC 20% 39                                                                                                                                                                                                                                                                                                                                                                                                         | If any type of lithium battery is selected in program 5. When the working mode of the inverter is set to the battery priority mode, the inverter will be forced to enter the mains charging when the SOC of the BMS is lower than the set value. |
| 40 | Bat Soc Turn To Dc                 | 5tb 95% 40                                                                                                                                                                                                                                                                                                                                                                                                         | If any type of lithium battery is selected in program 5. When the working mode of the inverter is set to the battery priority mode, the inverter resumes the DC working mode when the SOC of the BMS is higher than the set value.               |
| 41 | Bat Restart Soc                    | b5t 50% 41                                                                                                                                                                                                                                                                                                                                                                                                         | If any type of lithium battery is selected in program 5. When the inverter is turned on, the SOC must be higher than the set value to work normally.                                                                                             |
| 45 | Reset PV energy storage            | Notre set (Default)<br>7rt 45                                                                                                                                                                                                                                                                                                                                                                                      | Reset<br>r5t 45                                                                                                                                                                                                                                  |
| 46 | Start charging time for AC charger | 00:00(Default)<br>5tA 000 46<br>The setting range of start charging time for AC charger is from 00:00 to 23:00, increment of each click is 1 hour.                                                                                                                                                                                                                                                                 |                                                                                                                                                                                                                                                  |
| 47 | Stop charging time for AC charger  | 00: 00(Default)<br>5tD 000 47<br>The setting range of scheduled Time for AC output on is from 00: 00 to 23:00, increment of each click is 1 hour.                                                                                                                                                                                                                                                                  |                                                                                                                                                                                                                                                  |

|    |                                                                                                                                                                                                          |                                                                                                                                                                                                                                                                                                    |                                                                        |
|----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------|
| 28 | Reset factory setting                                                                                                                                                                                    | default:<br>Std OFF 28                                                                                                                                                                                                                                                                             |                                                                        |
|    |                                                                                                                                                                                                          | Std ON 28                                                                                                                                                                                                                                                                                          |                                                                        |
| 29 | Low DC cut-off voltage:<br>• If battery power is only power source available inverter will shut down.<br>• If PV energy and battery power are available, inverter will charge battery without AC output. | 24V system default setting:21.0V<br>COV 210 <sup>v</sup> 29                                                                                                                                                                                                                                        |                                                                        |
|    |                                                                                                                                                                                                          | 48V system default setting:42.0V<br>COV 420 <sup>v</sup> 29                                                                                                                                                                                                                                        |                                                                        |
|    |                                                                                                                                                                                                          | If self-defined is selected in program 5, this program can be set up. Setting range is from 20.0V to 26.0V for 24V system and 40.0V to 52.0V for 48V system. Increment of each click is 0.1V Low DC cut-off voltage will be fixed to setting value no matter what percentage of load is connected. |                                                                        |
| 30 | Battery equalization                                                                                                                                                                                     | Battery equalization<br>EEN 30                                                                                                                                                                                                                                                                     | Battery equalization disable (default)<br>Ed5 30                       |
|    |                                                                                                                                                                                                          | If "Flooded" or "User Defined" is selected in program 05, this program can be setup.                                                                                                                                                                                                               |                                                                        |
| 31 | Battery equalization voltage                                                                                                                                                                             | 24V system default setting:29.2V<br>EV 292 <sup>v</sup> 31                                                                                                                                                                                                                                         |                                                                        |
|    |                                                                                                                                                                                                          | 48V system default setting:58.4V<br>EV 584 <sup>v</sup> 31                                                                                                                                                                                                                                         |                                                                        |
|    |                                                                                                                                                                                                          | Setting range is from 24.0V to 30.0V for 24V system and 48.0V to 60.0V for 48V system. Increment of each click is 0.1V.                                                                                                                                                                            |                                                                        |
| 33 | Battery equalized time                                                                                                                                                                                   | 60min (default)<br>60 33                                                                                                                                                                                                                                                                           | Setting range is from 5min to 900min. Increment of each click is 5min. |
| 34 | Battery equalized timeout                                                                                                                                                                                | 120min (default)<br>120 34                                                                                                                                                                                                                                                                         | Setting range is from 5min to 900min. Increment of each click is 5min. |
| 35 | Equalization interval                                                                                                                                                                                    | 30days (default)<br>30d 35                                                                                                                                                                                                                                                                         | Setting range is from 0 to 90 days. Increment of each click is 1 day.  |

2. Insert the battery wires flatly into battery connectors of inverter and make sure the bolts are tightened with torque of 2 Nm in clockwise direction. Make sure polarity at both the battery and the inverter/charge is correctly connected and conductors are tightly screwed into the battery terminals. Recommended tool: # 2 Pozi Screwdriver

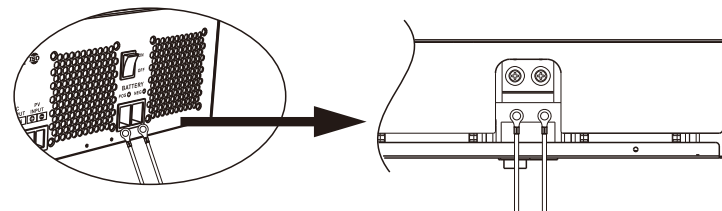

|  |                                                                                                                                                                                                            |
|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>WARNING:</b> Shock Hazard<br>Installation must be performed with care due to high battery voltage in series.                                                                                            |
|  | <b>CAUTION!!</b> Before making the final DC connection or closing DC breaker/disconnector, be sure positive( + ) must be connected to positive( + ) and negative( - ) must be connected to negative ( - ). |

#### 4.5 AC Input Output Connection

**CAUTION!!** Before connecting to AC input power source, please Install a separate AC breaker between inverter and AC input power source. This will ensure the Inverter can be disconnected during maintenance and fully protected from over current of AC input. The recommended spec of breaker is 32A for 24V system and 63A for 48V system .

**CAUTION! !** There are two terminal blocks with " IN " and " OUT " markings. Please do NOT mis-connect input and output connectors.

**WARNING!** All wiring must be performed by qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for AC input connection. To reduce risk of injury, please use the proper recommended cable size as below.

#### Suggested cable requirement for AC wires


| Rated Capacity | Gauge | Torque value |
|----------------|-------|--------------|
| 2KVA           | 14AWG | 0.8~1.0Nm    |
| 3.6KVA         | 12AWG | 1.2~1.6Nm    |
| 6.2KVA         | 10AWG | 1.4~1.6Nm    |
| 11KVA          | 8AWG  | 1.4~1.6Nm    |

Please follow below steps to implement AC input/ output connection

1. Before making AC input/output connection be sure to open DC protector or disconnector first.
2. Remove insulation sleeve 10mm for six conductors. And shorten phase L and neutral conductor N3 mm.

3. Insert AC input wires according to polarities indicated on terminal block and tighten the terminal screws. Be sure to connect PE protective conductor(⊕)first.

⊕→Ground(yellow-green)  
L→LINE(brown or black)  
N→Neutral (blue)

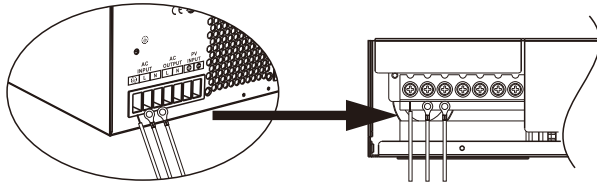

**WARNING:**

Be sure that AC power source is disconnected before attempting to hardwire it to the unit.

4. Make sure the wires are securely connected

**CAUTION:** Appliances such as air conditioner are required at least 2~3 minutes to restart because it's required to have enough time to balance refrigerant gas inside of circuits. If a power shortage occurs and recovers in a short time, it will cause damage to your connected appliances. To prevent this kind of damage, please check manufacturer of air conditioner if it's equipped with time-delay function before installation. Otherwise, this inverter/ charger will trig overload fault and cut off output to protect your appliance but sometimes it still causes internal damage to the air conditioner.

#### 4.6 PV Connection

##### PV Connection(Only apply for the model with solar charger)

**CAUTION:**Before connecting to PV modules, please install **separately** a DC circuit breaker between inverter and PV modules.

**WARNING!** All wiring must be performed by a qualified personnel.

**WARNING!** It's very important for system safety and efficient operation to use appropriate cable for PV module connection. To reduce risk of injury, please use the proper recommended cable size as below.

| Typical Amperage | Gauge | Torque Value |
|------------------|-------|--------------|
| 30A              | 12AWG | 1.4~1.6Nm    |

##### PV module selection:

When choosing the right PV module, be sure to first consider the following requirements:

The open circuit voltage (Voc) of the PV modules does not exceed the maximum PV array open circuit voltage of the inverter. The maximum supply voltage of the PV modules should be close to the optimal PV access voltage range of the inverter for best performance. If one PV module cannot meet this requirement, it is necessary to connect multiple PV modules in series.

|    |                                                                                                           |                                                                                                                                                                                               |                                                                                                                                                                                         |
|----|-----------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 19 | Auto return to default display screen                                                                     | Return to default display screen (default)<br><b>ESP 19</b>                                                                                                                                   | If selected, no matter how users switch display screen, it will automatically return to default display screen (Input voltage /output voltage) after no button is pressed for 1 minute. |
|    |                                                                                                           | Stay at latest screen<br><b>1EP 19</b>                                                                                                                                                        | If selected, the display screen will stay at latest screen user finally switches.                                                                                                       |
| 20 | Backlight control                                                                                         | Backlight on (default)<br><b>LON 20</b>                                                                                                                                                       | Backlight off<br><b>LOF 20</b>                                                                                                                                                          |
| 22 | Beeps while primary source is interrupted                                                                 | Alarm on (default)<br><b>RON 22</b>                                                                                                                                                           | Alarm off<br><b>ROF 22</b>                                                                                                                                                              |
| 23 | Overload bypass:<br>When enabled, the unit will transfer to line mode if overload occurs in battery mode. | Bypass disable (default)<br><b>bYd 23</b>                                                                                                                                                     | Bypass enable<br><b>bYE 23</b>                                                                                                                                                          |
| 24 | Battery low voltage<br>● If battery power is only power source available inverter will alarm.             | Battery low voltage 44.0V<br><b>LOV 440<sup>v</sup> 24</b>                                                                                                                                    |                                                                                                                                                                                         |
|    |                                                                                                           | Setting range is from 20.0V-27.0V for 24V system and 40.0V-54.0V for 48V system.                                                                                                              |                                                                                                                                                                                         |
| 25 | Record fault code                                                                                         | Record enable (default)<br><b>FEN 25</b>                                                                                                                                                      | Record disable<br><b>FbS 25</b>                                                                                                                                                         |
| 26 | Bulk charging voltage (C.V voltage)                                                                       | 24V system default setting:28.2V<br><b>CV 282<sup>v</sup> 26</b>                                                                                                                              |                                                                                                                                                                                         |
|    |                                                                                                           | 48V system default setting:56.4V<br><b>CV 564<sup>v</sup> 26</b>                                                                                                                              |                                                                                                                                                                                         |
|    |                                                                                                           | If self-defined is selected in program 5, this program can be set up. Setting range is from 24.0V to 30.0V for 24V system and 48.0V to 60.0V for 48V system. Increment of each click is 0.1V. |                                                                                                                                                                                         |
| 27 | Floating charging voltage                                                                                 | 24V system default setting:27.0V<br><b>FLV 270<sup>v</sup> 27</b>                                                                                                                             |                                                                                                                                                                                         |
|    |                                                                                                           | 48V system default setting:54.0V<br><b>FLV 540<sup>v</sup> 27</b>                                                                                                                             |                                                                                                                                                                                         |



|    |                                                                                         |                                                                                                                                                               |                                                                                                                                                                    |
|----|-----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 13 | Setting voltage point back to battery mode when selecting "SBU priority" in program 01. | Available options in 24 system model:                                                                                                                         |                                                                                                                                                                    |
|    |                                                                                         | Battery fully charged                                                                                                                                         | 27V(default)                                                                                                                                                       |
|    |                                                                                         | FUL 13                                                                                                                                                        | 270 <sup>v</sup> 13                                                                                                                                                |
|    |                                                                                         | Setting range is from 24V to 29V. Increment of each click is 0.5V.                                                                                            |                                                                                                                                                                    |
|    |                                                                                         | Available options in 48 system model:                                                                                                                         |                                                                                                                                                                    |
| 16 | Charger source priorit: To configure charger source priority                            | Battery fully charged                                                                                                                                         | 54V (default)                                                                                                                                                      |
|    |                                                                                         | FUL 13                                                                                                                                                        | 540 <sup>v</sup> 13                                                                                                                                                |
|    |                                                                                         | Setting range is from 48V to 58V. Increment of each click is 1V.                                                                                              |                                                                                                                                                                    |
|    |                                                                                         | If this inverter/charger is working in Line, Standby or Fault mode, charger source can be programmed as below:                                                |                                                                                                                                                                    |
|    |                                                                                         | Solar first                                                                                                                                                   | Solar energy will charge battery as first priority. Utility will charge battery only when solar energy is not available.                                           |
| 17 | Battery reboot voltage                                                                  | Solar and Utility(default)                                                                                                                                    | Solar energy and utility will charge battery at the same time.                                                                                                     |
|    |                                                                                         | Only Solar                                                                                                                                                    | Solar energy will be the only charger source no matter utility is available or not.                                                                                |
|    |                                                                                         | Solar residual                                                                                                                                                | Solar energy will support. all connected loads as first priority, the residual energy will charge battery                                                          |
|    |                                                                                         | If this inverter/charger is working in Battery mode, only solar energy can charge battery. Solar energy will charge battery if it's available and sufficient. |                                                                                                                                                                    |
|    |                                                                                         | default:                                                                                                                                                      | If in SOC mode, when the machine will restart and resume operation until the PV charging reaches the set value after the battery is low and the device shuts down. |
| 18 | Alarm control                                                                           | Alarm on (default)                                                                                                                                            | Alarm off                                                                                                                                                          |
|    |                                                                                         | 60N 18                                                                                                                                                        | 60F 18                                                                                                                                                             |

| Model                   | DT1220S   | DT2436S  | DT4862S  | DT4811S        |
|-------------------------|-----------|----------|----------|----------------|
| PV Charging Mode        | MPPT      | MPPT     | MPPT     | MPPT Dual MPPT |
| MAX.PV Input Power      | 3000W     | 5000W    | 8500W    | 2*7500W        |
| MPPT Tracking Range     | 60~500Vdc |          |          | 90~500Vdc      |
| Best Voltage            | 300-400V  | 300~400V | 360~430V | 360~430V       |
| MAX.PV Input Voltage    | 500Vdc    | 500Vdc   | 500Vdc   | 500Vdc         |
| PV Max Input Current    | 15A       | 15A      | 27A      | 27A/27A        |
| MAX.PV Charging Current | 100A      | 120A     | 120A     | 150A           |
| MAX.AC Charging Current | 80A       | 100A     | 100A     | 150A           |
| MAX.Charging Current    | 100A      | 120A     | 120A     | 150A           |

### PV Module Wire Connection

Please follow below steps to implement PV module connection:

1. Remove insulation sleeve 10 mm for positive and negative conductors.
2. Suggest to put bootlace ferrules on the end of positive and negative wires with a proper crimping tool
3. Fix wire cover to the inverter with supplied screws as shown in below chart.

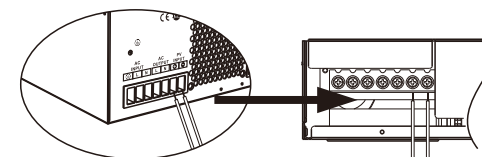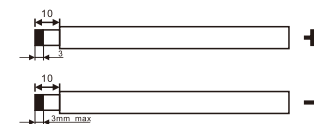

4. Check correct polarity of wire from PV modules and PV input connectors. Then, connect positive pole( + ) of connection wire to positive pole( + ) of PV input connector. Connect negative pole (-) of connection wire to negative pole(-) of PV input connector. Screw two wires tightly in clockwise direction. Recommended tool: 4mm blade screwdriver.

### The CT Operation Guide


With CT connected, hybrid inverter can be easily integrated into the existing household system. It's to arrange self. consumption via CT to control power generation and battery charging of the Inverter.

#### 1. Single commissioning

**Step 1.** Power off the inverter and connect the external CT by using the tool accessory to install on the spring terminal block. Be noted the mark of current flow direction on the CT should point to the Inverter and the polarity on connecting CT wires on the terminal block should be followed as "L+" VS red wire and "L-" VS black wire.


**Step 2.** Power on the inverter.

**Step 3.** Enter LCD setting on the inverter with CT sensor connected and set CT function to "PEC".

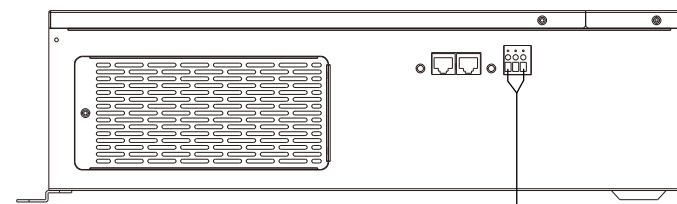


#### 4.7 Final Assembly

After connecting all wirings, please put bottom cover back by screwing two screws as shown below.

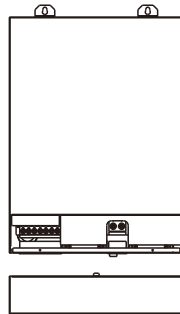

### 5 OPERATION

#### 5.1 Power ON/OFF

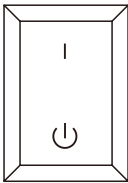

Once the unit has been properly installed and the batteries are connected well, simply press On/Off switch (located on the button of the case) to turn on the unit.

##### 5.1.1 Steps to start up

Connect the battery that meets the requirements (battery voltage needs to be beyond 23V) or AC (AC needs to confirm the suitable input range depends on the output mode), then you can start up the inverter.

##### ➤ Mains power on

Connect to normal AC power, press the switch, the system will automatically turn on. If you set AC output power priority, after waiting for a period of time, the panel will display AC mode that represents turn on the machine successfully, then will enter the AC mode.

When the normal mains power is connected and press the power-on button then the system will automatically power on. If it is set as AC output priority, after a period of time, the panel will display the AC mode to indicate that the power-on is complete and enter the AC mode.

##### ➤ Battery boot

Connect to battery, press the power-on button to establish a working power source.

The system will automatically turn on, after waiting for a period of time, the panel will display battery mode that represents turn on the machine successfully, then will enter the battery mode.

##### 5.1.2 Shutdown steps



When the system is in battery mode or AC mode output, press the switch again, then the system will be turned off.

|    |                                                                                                                                                                                               |                                        |                                                                                                |
|----|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------|------------------------------------------------------------------------------------------------|
| 06 | Auto restart when overload occurs                                                                                                                                                             | Restart disable(default)<br>E-F 06     | Restart enable<br>L-E 06                                                                       |
| 07 | Auto restart when over temperature occurs                                                                                                                                                     | Restart disable (default)<br>E-F 07    | Restart enable<br>L-E 07                                                                       |
| 08 | ECO function:<br>System will temporarily stop when the load is low in battery mode.                                                                                                           | disable (default)<br>ECO SdS 08        | enable<br>ECO SEN 08                                                                           |
|    |                                                                                                                                                                                               | enable<br>ECO SEN 08                   |                                                                                                |
| 09 | Output frequency                                                                                                                                                                              | 50Hz(default)<br>50 <sub>Hz</sub> 09   | 60Hz<br>60 <sub>Hz</sub> 09                                                                    |
| 10 | Output voltage                                                                                                                                                                                | 220V<br>220 <sup>v</sup> 10            | 230V (default)<br>230 <sup>v</sup> 10                                                          |
|    |                                                                                                                                                                                               | 240V<br>240 <sup>v</sup> 10            |                                                                                                |
| 11 | Maximum utility charging current<br>Note: If setting value in program 02 is smaller than that in program in 11, the inverter will apply charging current from program 02 for utility charger. | 30A(default)<br>30A 11                 | Setting range is 2A, then from 10A to max.AC charging current. Increment of each click is 10A. |
| 12 | Setting voltage point back to utility source when selecting "SBU priority" in program 01.                                                                                                     | Available options in 24 system model:  |                                                                                                |
|    |                                                                                                                                                                                               | 23.0V (default)<br>230 <sup>v</sup> 12 | Setting range is from 22V to 25.5V. Increment of each click is 0.5V.                           |
|    |                                                                                                                                                                                               | Available options in 48 system model:  |                                                                                                |
|    |                                                                                                                                                                                               | 46V (default)<br>460 <sup>v</sup> 12   | Setting range is from 44V to 51V. Increment of each click is 1V.                               |

|    |                                                                                                                                                                                 |                                           |                                                                                                                                                                          |
|----|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 02 | Maximum charging current:<br>To configure total charging current for solar and utility chargers.<br>(Max. charging current = utility charging current + solar charging current) | 60A(default)<br><br>60 <sup>A</sup> 02    | Setting range is from 10A to maximum charging current.<br>Increment of each click is 10A.                                                                                |
| 03 | AC input voltage range                                                                                                                                                          | Appliances (default)<br>APL 03            | If selected, acceptable AC input voltage range will be within 90-280VAC.                                                                                                 |
|    |                                                                                                                                                                                 | UPS<br>UPS 03                             | If selected, acceptable AC input voltage range will be within 170-280VAC.                                                                                                |
| 05 | Battery type                                                                                                                                                                    | AGM (default)<br>AGM 05                   | Flooded<br>FLD 05                                                                                                                                                        |
|    |                                                                                                                                                                                 | User-Defined<br>USE 05                    | If "User-Defined" is selected, battery charge voltage, low DC cut-off voltage and dual cut -off voltage can be set up in program 24,26,27,29 and 61.                     |
|    |                                                                                                                                                                                 | LiA-protocol compatible battery<br>LiA 05 | If selected, programs of 24,26,27 and 29 will be automatically set up.<br>No need for further setting.                                                                   |
|    |                                                                                                                                                                                 | Pylontech battery<br>PYL 05               |                                                                                                                                                                          |
|    |                                                                                                                                                                                 | Techfine battery<br>TF 05                 |                                                                                                                                                                          |
|    |                                                                                                                                                                                 | Growatt battery<br>GT 05                  |                                                                                                                                                                          |
|    |                                                                                                                                                                                 | Felicity battery<br>FEL 05                |                                                                                                                                                                          |
|    |                                                                                                                                                                                 | LiB-protocol compatible battery<br>LiB 05 | Select "LiB" if using Lithium battery compatible to Lib protocol.<br>If selected, programs of 26,27 and 29 will be automatically set up.<br>No need for further setting. |
|    |                                                                                                                                                                                 | 3 rd party lithium battery<br>LiC 05      | If selected, programs of 26,27 and 29 will be automatically set up.<br>No need for further setting. Please contact the battery supplier for installation procedure.      |

## 5.2 Operation and Display Panel

The operation and display panel, shown in below chart , is on the front panel of the inverter. It includes three indicators , four function keys and a LCD display, indicating the operating status and input/output power information.

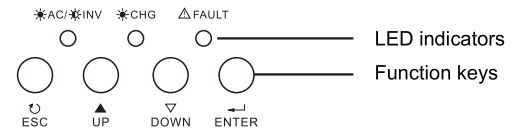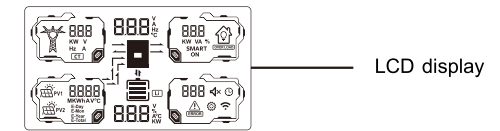

### LED Indicator


| LED Indicator |        |          | Messages                                            |
|---------------|--------|----------|-----------------------------------------------------|
| AC/INV        | Green  | Solid On | Output is powered by utility in Line mode.          |
|               |        | Flashing | Output is powered by battery or PV in battery mode. |
| CHG           | Yellow | Solid On | Battery is fully charged.                           |
|               |        | Flashing | Battery is charging.                                |
| FAULT         | Red    | Solid On | Fault occurs in the inverter.                       |
|               |        | Flashing | Warning condition occurs in the inverter.           |

### Function Keys

| Function Key | Description                                                    |
|--------------|----------------------------------------------------------------|
| ESC          | To exit setting mode                                           |
| UP           | To go to previous selection                                    |
| DOWN         | To go to next selection                                        |
| ENTER        | To confirm the selection in setting mode or enter setting mode |

## Display Setting

The LCD display information will be switched in turns by pressing "UP" or "DOWN" key. The selectable information is switched as below order: voltage, frequency, current, power, Temperature, firmware version, date.

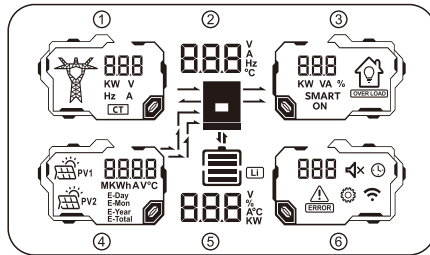





| Select item                                                                                                                                                                                                                                                                                                                                                                                     | LCD display |  |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|--|
| ① AC Input voltage<br>(it indicates that the input voltage of the generator is displayed at this time, and the power and frequency displayed after turning the page are also the input parameters of the generator.)<br>② Output voltage<br>③ Load percentage<br>④ Left: PV1 input voltage<br>Right: PV2 input voltage<br>⑤ Battery voltage<br>⑥ Warning or Fault code (Default Display Screen) |             |  |
| ① AC Input frequency<br>② Output frequency<br>③ Load power in VA<br>④ Left: PV1 input current<br>Right: PV2 input current<br>⑤ Battery current<br>⑥ Warning or Fault code                                                                                                                                                                                                                       |             |  |
| ① AC input power in Watts<br>② Output voltage<br>③ Load power in Watts<br>④ Left: PV1 input power in Watts<br>Right: PV2 input power in Watts<br>⑤ Battery in Watts<br>⑥ Warning or Fault code                                                                                                                                                                                                  |             |  |














## 5.3 LCD Setting

After pressing and holding ENTER button for 3 seconds, the unit will enter setting mode. Press "UP" or "DOWN" button to select setting programs. And then, press "ENTER" button to confirm the selection or ESC button exit.

### Setting Programs:

| Program | Description                      | Selectable option |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|---------|----------------------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 00      | Exit setting mode                | Escape<br>ESC 00  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| 01      | Output source priority selection | SUB 01            | Solar energy provides power to the loads as first priority.<br>If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time.                                                                                                                                                                                                                                                                                                                         |
|         |                                  | SBU 01            | Solar energy provides power to the loads as first priority.<br>If solar energy is not sufficient to power all connected loads, battery energy will supply power to the loads at the same time.<br>Utility provides power to the loads only when battery voltage drops to either low-level warning voltage or the setting point in program 12 or solar and battery is not sufficient.                                                                                                                                   |
|         |                                  | SUF 01            | If solar energy is sufficient to all connected loads and charge battery, the solar energy could feedback to the grid (sell power to grid).<br>If solar energy is not sufficient to power all connected loads, Utility energy will supply power to the loads at the same time.                                                                                                                                                                                                                                          |
|         |                                  | PEC 01            | The units will not only provide power to the connected load but also give power to connected home load. If PV power and battery power is insufficient, it will take grid energy as supplement. The units will not sell power to grid. In this mode, a CT can be used. The installation method of the CT please refer to chapter about CT connection. The external CT will detect power flowing back to the grid and will reduce the power of the inverter only to supply the local load, charge battery and home load. |
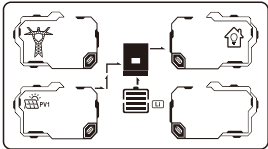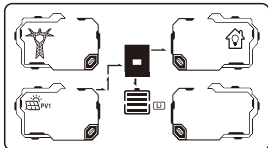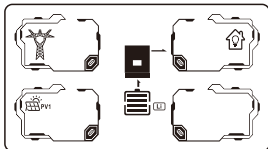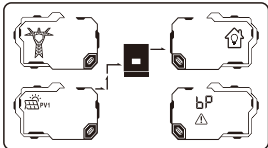
| Operating mode | Behaviors                       | LCD display                                                                                                                                                         |
|----------------|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Battery mode   | Output power from battery or PV | PV energy and battery energy supply power to the load.<br>                         |
|                |                                 | The PV energy power to the load and has remaining energy to charge the battery<br> |
|                |                                 | Battery provides power to the load.<br>                                            |
| Only PV mode   | Output power from PV            | PV provides power to the load.<br>                                                |
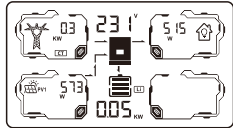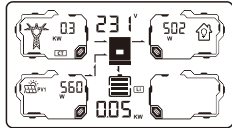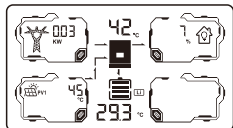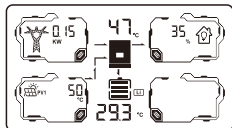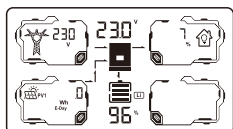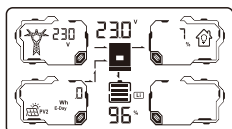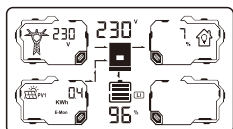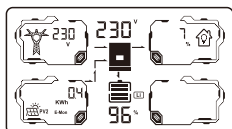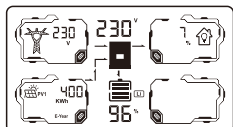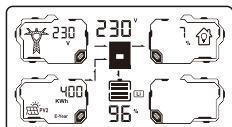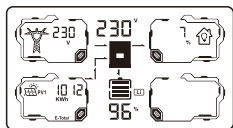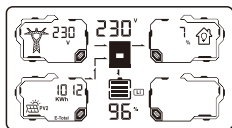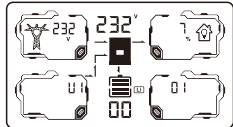
| Select item                                                                                                                                                                                                                                                                                    | LCD display                                                                           |                                                                                       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| ① External CT AC input power in Watts<br>(If the external CT is reversed, a "-" will be displayed in front of the power figure.)<br>② Output voltage<br>③ Apparent power<br>④ Left:PV1 input power in Watts<br>Right:PV2 input power in Watts<br>⑤ Battery in Watts<br>⑥ Warning or Fault code |    |    |
| ① AC input power in Watts<br>② Inverter temperature<br>③ Load percentage<br>④ Left:PV1 temperature<br>Right:PV2 temperature<br>⑤ Battery temperature<br>⑥ Warning or Fault code                                                                                                                |    |    |
| ① AC Input voltage<br>② Output voltage<br>③ Load percentage<br>④ Left:PV1 energy generated this day /this Monthly/this year/total<br>Right:PV2 energy generated this day /this Monthly/this year/total<br>⑤ Battery percentage<br>⑥ Warning or Fault code(Default Display Screen)              |    |    |
|                                                                                                                                                                                                                                                                                                |    |    |
|                                                                                                                                                                                                                                                                                                |   |   |
|                                                                                                                                                                                                                                                                                                |  |  |
| Main board firmware version<br>① AC Input voltage<br>② Output voltage<br>③ Load percentage<br>④⑤⑥Firmware version<br>(CPU:U1.00.01)                                                                                                                                                            |  |                                                                                       |

| Select item                                                                                  | LCD display |
|----------------------------------------------------------------------------------------------|-------------|
| ① hour<br>② minute<br>③ second<br>④ year<br>⑤ month<br>⑥ day<br>(09:43:07 September 19 2025) |             |

### Operating Mode Description

| Operating mode                                                                                                                                                                                                                                                                | Behaviors                                           | LCD display                                      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|--------------------------------------------------|
| <b>Standby mode</b><br>Note:<br>*Standby mode: The inverter is not turned on yet but at this time, the inverter can charge battery without AC output.<br>*Power swing mode: If enabled, the output of inverter will be off when connected load is pretty low or not detected. | No output power, solar or utility charger available | Battery is charged by utility.<br>               |
|                                                                                                                                                                                                                                                                               |                                                     | Battery is charged by PV energy.<br>             |
|                                                                                                                                                                                                                                                                               |                                                     | Battery is charged by utility and PV energy.<br> |
|                                                                                                                                                                                                                                                                               |                                                     | No charging.<br>                                 |

| Operating mode | Behaviors                                    | LCD display                                                                                                          |
|----------------|----------------------------------------------|----------------------------------------------------------------------------------------------------------------------|
| Line mode      | Output power from utility. Charger available | Utility charges battery and provides power to load.<br>                                                              |
|                |                                              | PV energy, battery power and utility provide power to load.<br>                                                      |
|                |                                              | If "PEC"-is-selected as output source priority, PV energy and battery will support the output load with utility.<br> |
|                |                                              | If "PEC" is selected as output source priority, Power from battery and utility.<br>                                  |
| Line mode      | Output power from utility. Charger available | If "PEC" is selected as output source priority, The remaining PV energy can be supplied to the grid.<br>             |
|                |                                              | If "SUF" is selected as output source priority, The remaining PV energy can be supplied to the grid.<br>             |